

Instructions for wear checks of play equipment

The equipment must be checked for correct operation and safety, especially the points listed below:

Proof of maintenance

Playground

Date of installation


Checks depend on the type of equipment. Any equipment with moving parts must be checked at least twice a year, static equipment at least once a year.

Intervals for maintenance work and checks generally depend on

- location
- kind of use
- frequency of use
- possible vandalism

For more details see also "General instructions for maintenance of playgrounds".

Tubular Dendrophone - Double Field
Order No. 10.53102

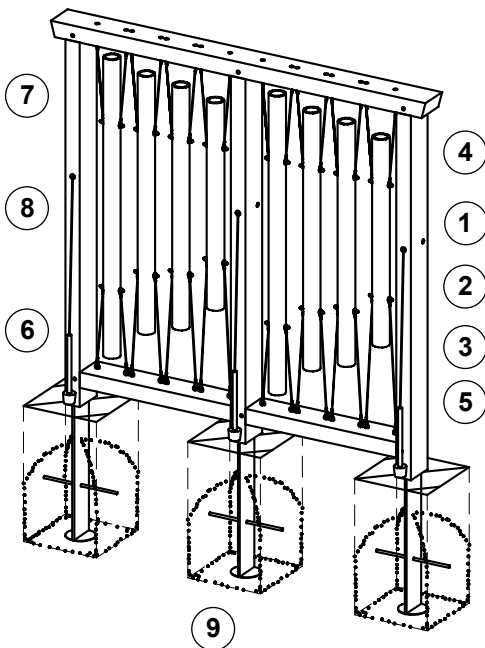

Wooden parts

1. Check for rot and, if necessary, smooth out splinters and round off sharp edges of cracks.
2. Check that all bolts and screws are tight and retighten if necessary.
3. **Recommendation:** apply wood preservative wax (www.complex-farben.eu) once a year.

Sound Tubes

4. Check the connections of the ropes to the tubes for firmness, if required tighten the nuts.
5. Check the tension of the ropes, if required tighten at the bottom ropes.

Beater

6. Check for wear and tear.
7. Check that beaters are securely connected.
8. If necessary, disentangle suspension cables; if a beater is missing (vandalism) install a replacement beater.

Structural stability

9. In order to check for tightness and corrosion, uncover the foundations once a year.

Special notes, e.g. for repairs

Repair not carried out, it is still possible to play on equipment

Repair not carried out, equipment is taken out of action


All work carried out, everything is in order

Maintenance carried out by:

For spare parts refer to back of page.

..... Date

Spare Parts
Tubular Dendrophone
Double Field
Order No. 10.53102

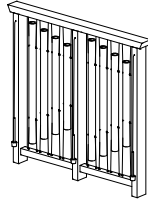

Please note that the safety standards of the equipment must not be affected. Therefore, when carrying out repairs it is helpful to **only use original parts**.

Order No. Spare part

10.99906 beater with stainless steel cable

