

# Instructions for wear checks of play equipment

The equipment must be checked for correct operation and safety, especially the points listed below:

Proof of maintenance

Playground .....

Date of installation .....

Checks depend on the type of equipment. Any equipment with moving parts must be checked at least twice a year, static equipment at least once a year.

Intervals for maintenance work and checks generally depend on

- location
- kind of use
- frequency of use
- possible vandalism

For more details see also "General instructions for maintenance of playgrounds".



## Whirligig

with Collar

Order No. 6.28000/6.28004/6.28006

with Arms

Order No. 6.28100/6.28104/6.28106

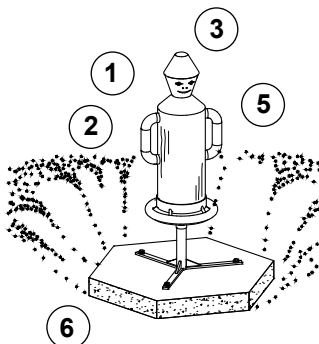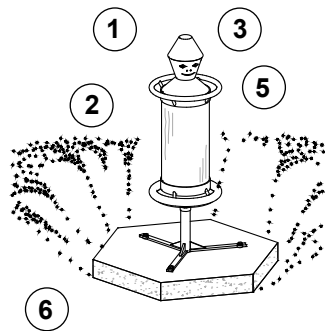

### Wooden parts

1. Check for rot and, if necessary, smooth out splinters and round off sharp edges of cracks.
2. If required, touch up or renew paintwork (use a solvent-free acrylic paint).

### Bearings

3. Check that bearings move smoothly. Grease if bearings make a squeaking noise or are difficult to turn. To do this, remove the hat and apply grease to the grease nipple underneath using a grease gun until bearings move smoothly again.
4. Replace plastic bearings if axle clearance is too high.

### Metal parts

5. Check handles or collar and foot ring are fastened properly.

### Structural stability

6. In order to check the bottom attachment uncover the foundation once a year.

Special notes, e.g. for repairs

Repair not carried out, it is still possible to play on equipment

Repair not carried out, equipment is taken out of action

All work carried out, everything is in order

Maintenance carried out by:

For spare parts refer to back of page.

..... Date .....

**Spare Parts**  
**Whirligig**  
**Order No. 6.28000**  
**6.28100**

Please note that the safety standards of the equipment must not be affected. Therefore, when carrying out repairs it is helpful to **only use original parts.**

**Order No. Spare part**

0.20040 hat

